



T628/T-NE


Assembly and Setup Instructions for T628T-NE (standing height) and T628-NE (sitting height)


Note: If you cannot understand these instructions or are concerned about safety of the installation Contact a qualified contractor or contact AVFI at 1-877-834-3876.


Not all hardware supplied will be used depending on the manufacturer of your display/s.

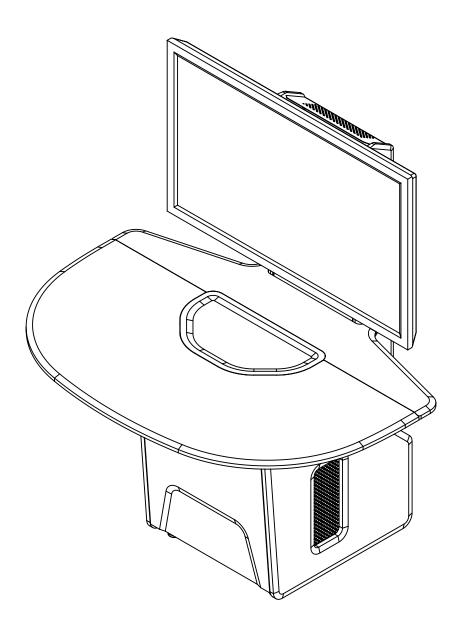

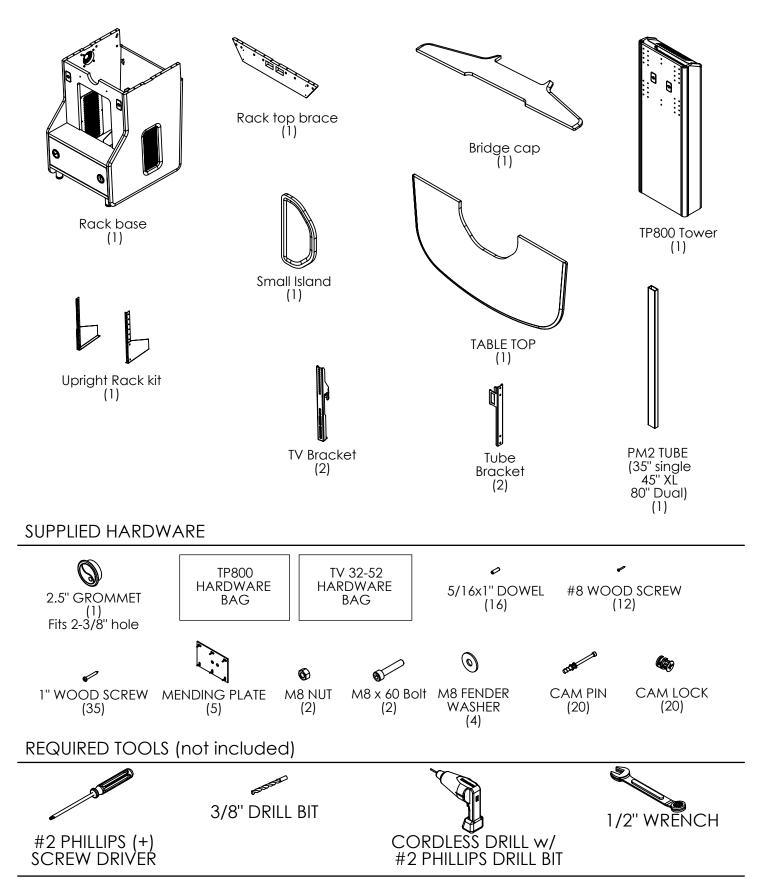

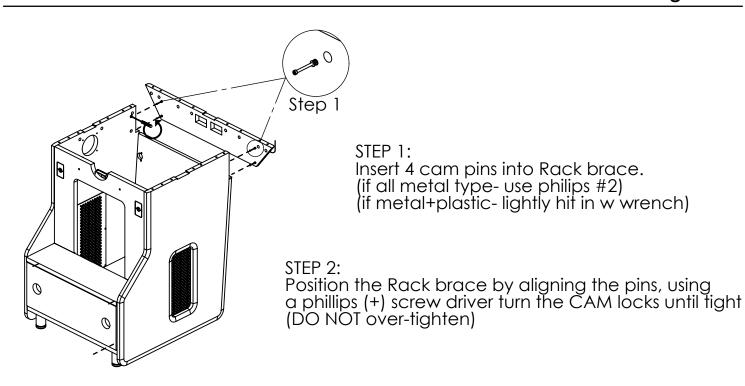


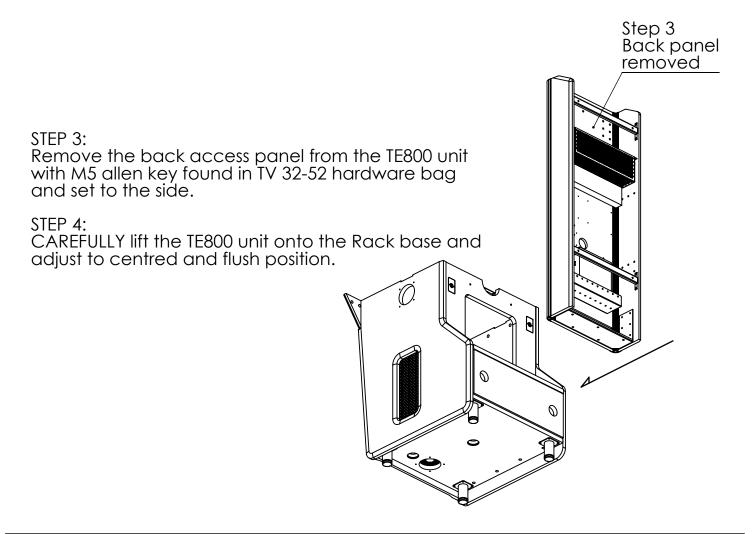

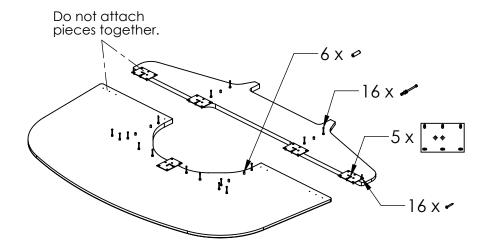


STEP 5:

- 1) Lay Table top pieces upside down on non-abrasive surface like carpet.
 2) Using a cordless drill with a phillips (+) bit install CAM pins into pre-drilled holes
 3) Attach mending plates with 1" Screws as shown
- 4) Insert Dowels in remaining holes.

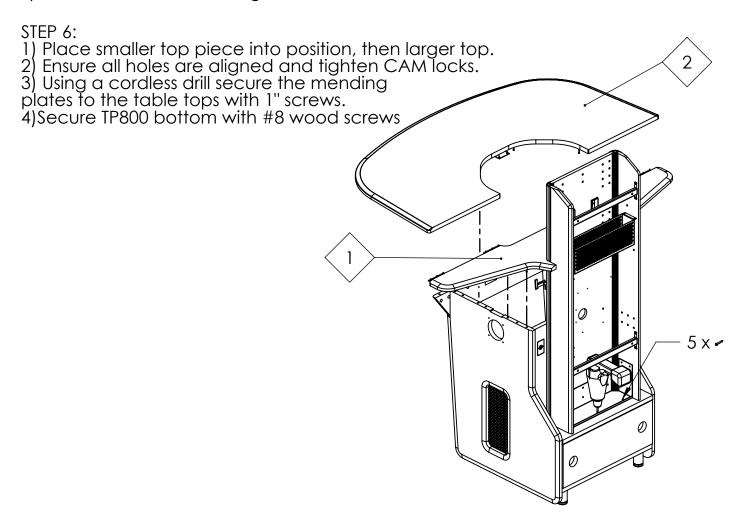

STEP 7: (top surface hidden for visibility)
1) Using a 3/8" bit, drill through the TE800 though the guide holes in brace.
2) Secure the two units using the provided hardware (m8x60,M8 bolt and washer)

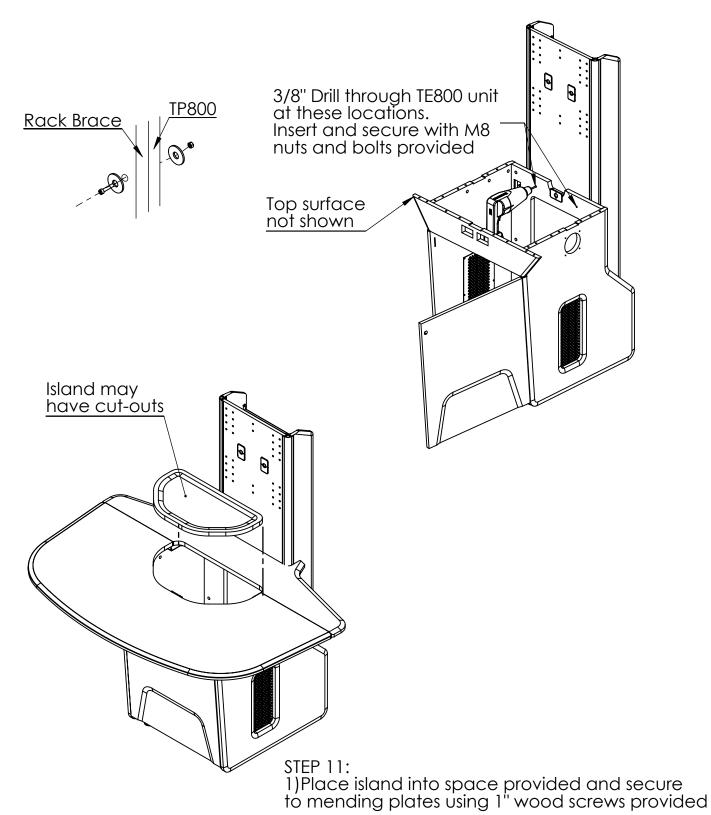

STEP 8

- 1. Place TV face down on blanket or non abrasive surface such as cardboard.
- 2. Check to see if your TV came with mounting hardware or not. If not,we have supplied the most common hardware. (TV hardware Bag 32-52) Most displays under 42" will use the M6 bolt. Most 42"+ will use the M8 bolts. See which bolt length you need by hand tightening only.
- 3. Place TV brackets so you can see the TV mounting holes through the bracket and insert bolt through a multi washer.
- 4. Hand tighten until there is resistance, then give a half turn with hex key.


 DO NOT OVERTIGHTEN AS THIS CAN DAMAGE OR PUNCTURE THE TV

Notes.

- Have 2 people lift the TV as it can be very heavy and awkward.
- Some TV's require non standard hardware. This bracket was made to accommodate up to M10 bolts which can be found at your local hardware store along with longer versions of the included hardware.

M8 X 40 M6 X 40 M6 X 40 Multi TV Bracket Spacer is used when the back of TV is

Spacer is used when the back of TV is not flat or the mount holes are sunk into the back of the TV. (Rarely used)

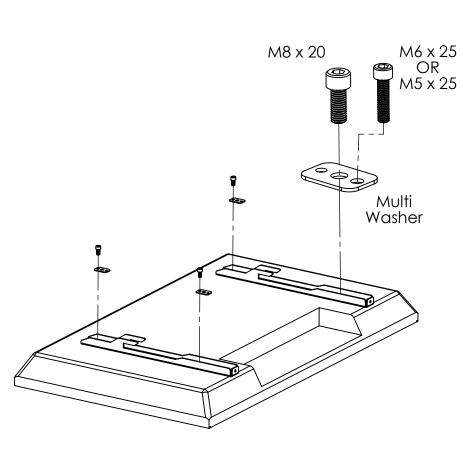

TV Hardware Bag

